
DVSC RetroFit Kit Instructions:

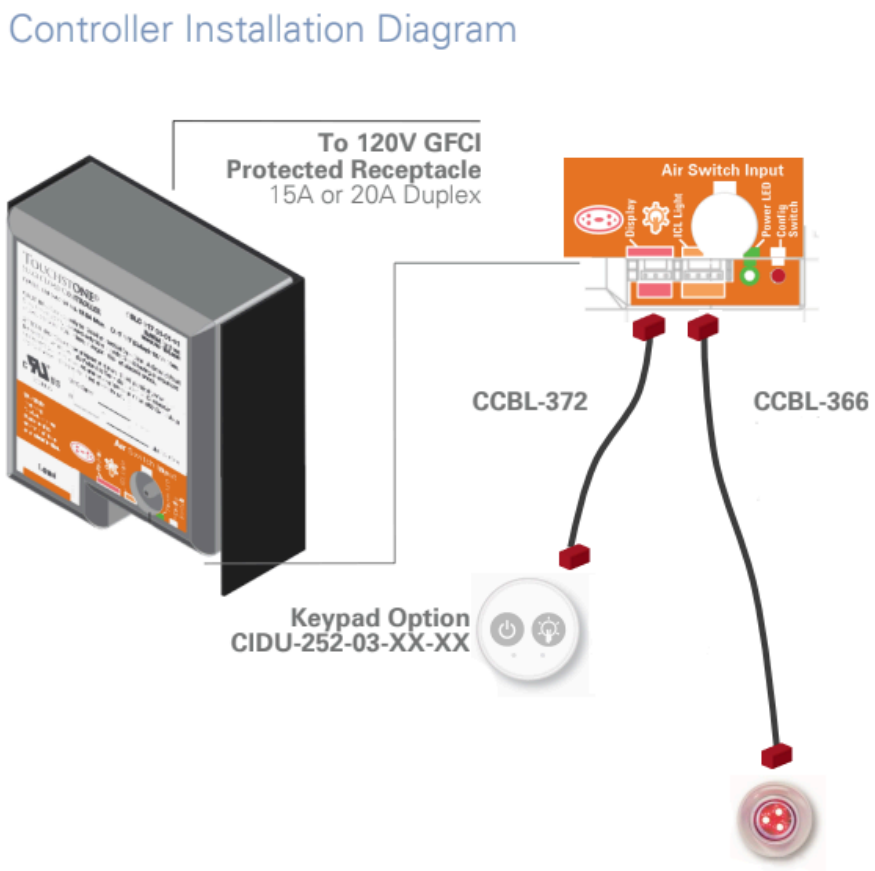

Configuration #3—Variable Speed Pump w/ Oscillation Option & Light

The Whirlpool Water system is activated by pressing the Power button on the Keypad. This will turn on the Pump at high speed and activate its 30-minute timer. Press again to turn off.



To reduce speed, Press and Hold to ramp down and release at desired speed. A Subsequent Press-and-Hold resets the load to High Speed and Ramp Down sequence. The Oscillate feature is activated if the button is held for 2 seconds after reaching the “Low” speed in the speed ramp. The system will stop automatically when the timer expires.

The LED Multi-Color Tub Light is activated by pressing the Light button Keypad. The first press will start its 30-minute timer, and activate the Tub Light in a “Rainbow” mode. Subsequent presses will change the color to Blue, White, Blue, Aqua, Green, Yellow, Red, Magenta, and off. The Tub Light will turn off automatically when the timer expires. To turn off this function earlier, press and hold the Light Key at any time.